

SiMP Strip

Quick Installation Guide

SLS-01-SW

SIMPNIC

1. Package Content

2. Get Started

2.1 Preparation

2.2 Installation

2.2.1 Length

2.2.2 Connection

2.2.3 Power On

2.2.4 Placement

2.2.5 Concatenation

2.3 Pairing

2.4 Reset

3. FAQ

4. Support

1. Package Content

SiMP Strip (3 meters)

Controller (white)

Adapter (white)

Quick Installation Guide

Warranty Card

SiMP Strip can only work with SiMPNiC SiMP Keeper. Please make sure you already have SiMP Keeper. Otherwise SiMP Strip can't work.

2. Get Started

2.1 Preparation

Get your SiMP Keeper ready and download SiMPNiC App in advance.

To make SiMP Strip work, you need to set up SiMP Keeper first. Please refer to SiMP Home Kit Quick Installation Guide or tutorial in SiMPNiC App.


You can scan QR code below to download SiMPNiC App from APP Store (iOS) or Google Play (Android).



2.2 Installation


2.2.1 Length

First, confirm the length you need to install. SiMP Strip is in unit of 0.1 meters. You can tell it by parallel copper mark. For example, if you need 3.53 meters long, you have to cut it at 3.6 meters. Please don't cut the side near the pin head, cut the other side. Otherwise the strip will not illuminate. Next step, use the double-sided tape to fix the strip once you confirm and cut the length.

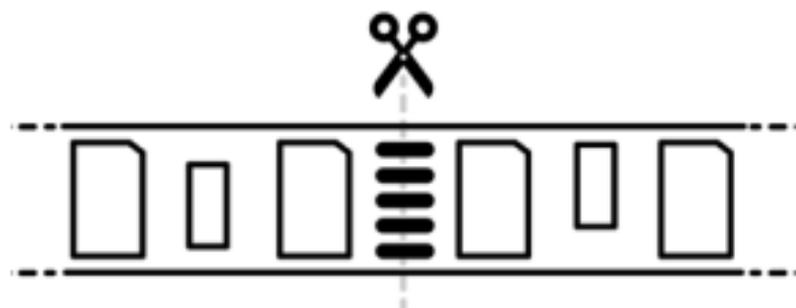

2.2.2 Connection

Second, connect the strip plug (with pins) with controller (with holes). There are arrow signs on both device. Make sure they are aligned.

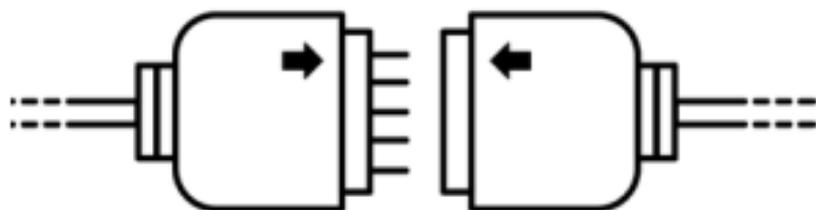

2.2.3 Power On

Third, connect the controller with adapter and plug adapter into the socket. When it illuminates, the work is done! You can use controller to adjust the illumination you prefer.

2.2.4 Placement

Make sure the strip is installed flat. If not, the illumination would be irregular. Please pay attention to the corner. Please don't use SiMP Strip in environment of extreme heat or humidity, like kitchen or bathroom.

2.2.5 Concatenation

In few special cases, you might need to concatenate two strips together.

Please pay attention: only strips with same spec and voltage can be concatenated. And the maximum concatenation length is 6 meters.

2.3 Pairing

Pairing SiMP Strip with your SiMP Keeper in SiMPNiC App.

If your SiMP Strip is from Home Kit, it's already in your SiMPNiC App. You can tap the "Room" icon at the navigation bar and then you will see it.

Power on SiMP Strip, and you will see it blinks in white rapidly. It lasts about 4 minutes long. During this time period, it's ready for pairing. If it is not blinking, refer to "Reset" section to make it to factory default settings.

- ① Make sure your smartphone is connected to Home Wi-Fi (2.4GHz).
- ② Open SiMPNiC App.
- ③ Select "Room" icon.
- ④ Select "+" to add device.
- ⑤ Select "SiMP Strip".
- ⑥ SiMP Keeper will beep 2 times and begin searching. The process lasts about 45 sec (remember to check SiMP Strip is blinking during this period). And then SiMP Strip will appear in the list.
- ⑦ If SiMP Strip is not found, select "Cancel" and search again.

2.4 Reset

When power is on, press the side button of SiMP Strip for 5 seconds. The blue LED indicator will start blinking, (for about 4 minutes). During this period of time, you can pair it.

Attention:

Once you reset, SiMP Strip will return to factory default settings. Only if you want remove it from current SiMP Keeper, otherwise it's not suggested to reset.

3. FAQ

Q: Why SiMP Strip is illuminating or not blinking?

A: Normally SiMP Strip illuminates constantly when power is on. If it does not illuminate, please reset it to factory default settings by pressing the controller button for 5 seconds and then it starts blinking.

Q: Why SiMP Strip can't be found in the list?

A: First, make sure SiMP Strip is blinking before pairing. If it still can not be found, try to search again.

Q: How do I know SiMP Strip is paired with SiMP Keeper successfully?

A: If SiMP Strip is paired successfully, you will see it in your SiMPNiC App after 45 seconds.

4. Support

For more product information, FAQ, and tutorials, please visit SiMPNiC website:



Youtube



Facebook page



For More support, please contact us via
support@simpnic.com

